

P25000



THANK YOU FOR CHOOSING KALLISTA

We appreciate your commitment to Kallista quality products. Please take a moment to review this manual before you install your Kallista product. If you encounter any installation or performance problems, please do not hesitate to contact us at the phone number listed at the bottom of the page.

BEFORE YOU BEGIN

<u>^</u>	CAUTION: Risk of fresh water contamination. To prevent water contamination, do not remove any components from this faucet. This faucet contains back-siphonage protection.
	Observe all local plumbing and building codes.
	Shut off the water supplies.
	Inspect waste and supply tubing for damage. Replace if necessary.
	Before installation, unpack the faucet and inspect for damage.
	For new installations, assemble the faucet to the sink before installing the sink.
	Kallista reserves the right to make revisions in the design of faucets without notice, as specified in the Price
	Book

TOOLS AND MATERIALS



Adjustable Wrench



Screwdriver



1-3/8" D. Hole Bit




Two 3/8" Male Supply Connections

Plus:


- Rags
- Cable Tie (optional)
- Bucket

INSTALLATION

1. NOTE: Locate the remote valve 4" (10.2 cm) from the spout. Refer to the countertop manufacturer for proper hole drilling procedure.

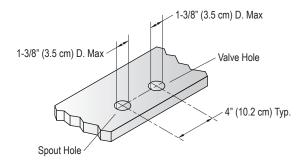


2. Slide the O-ring up to the base of the spout, then fit the faucet through the drilled hole.

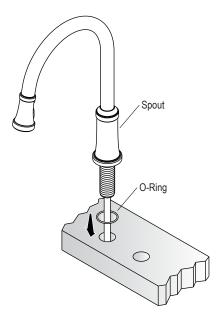

3. Partially thread screws into the ring.




4. Slide the fiber and metal washers onto the faucet shank. Thread the ring leaving approximately 1/4" (6 mm) between the ring and the surface material.

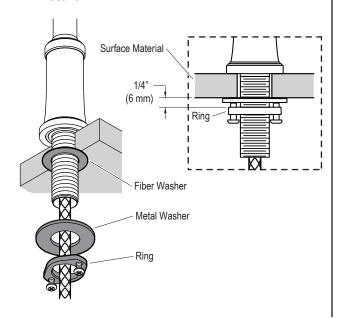

5. Tighten the screws securely and evenly.


INSTALLATION

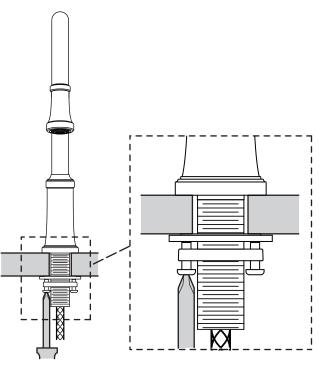


INSTALLATION

6.

- **a.** Slide the O-ring over the supply hoses onto the base of the remote valve.
- **b.** Insert the remote valve through the hole in the mounting surface.
- **C.** Assemble the bracket and nut to the stud from underneath the mounting surface.
- **d**. Align the handle and securely tighten the nut.

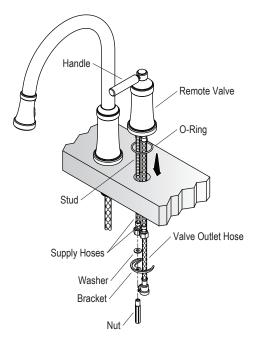

7. Connect and tighten the supply hoses.
NOTE: If the sink installation requires that you coil the supply hoses, maintain a 3" (7.6 cm) diameter minimum inside coil.

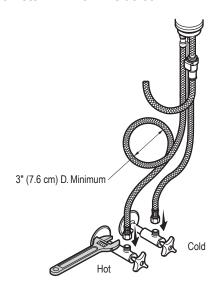

INSTALLATION

8.

- **a.** Place the valve outlet hose into a bucket or suitable container. Slowly turn on the hot and cold supplies. Slowly position the valve lever to the full cold ON position. Let the water run for one minute to remove any debris. Rotate the valve lever to the full hot position. Let the water run for one minute to remove any debris. Turn the valve lever to the OFF position.
- Slide the weight onto the spray hose. Verify that the hose ends are clean and that the O-ring is in place. Fully engage the hose ends. Extend and retract the spray hose to check for smooth operation. A second weight can be added to simplify retracting the spray head, if desired. Reposition the supply hoses if necessary.

